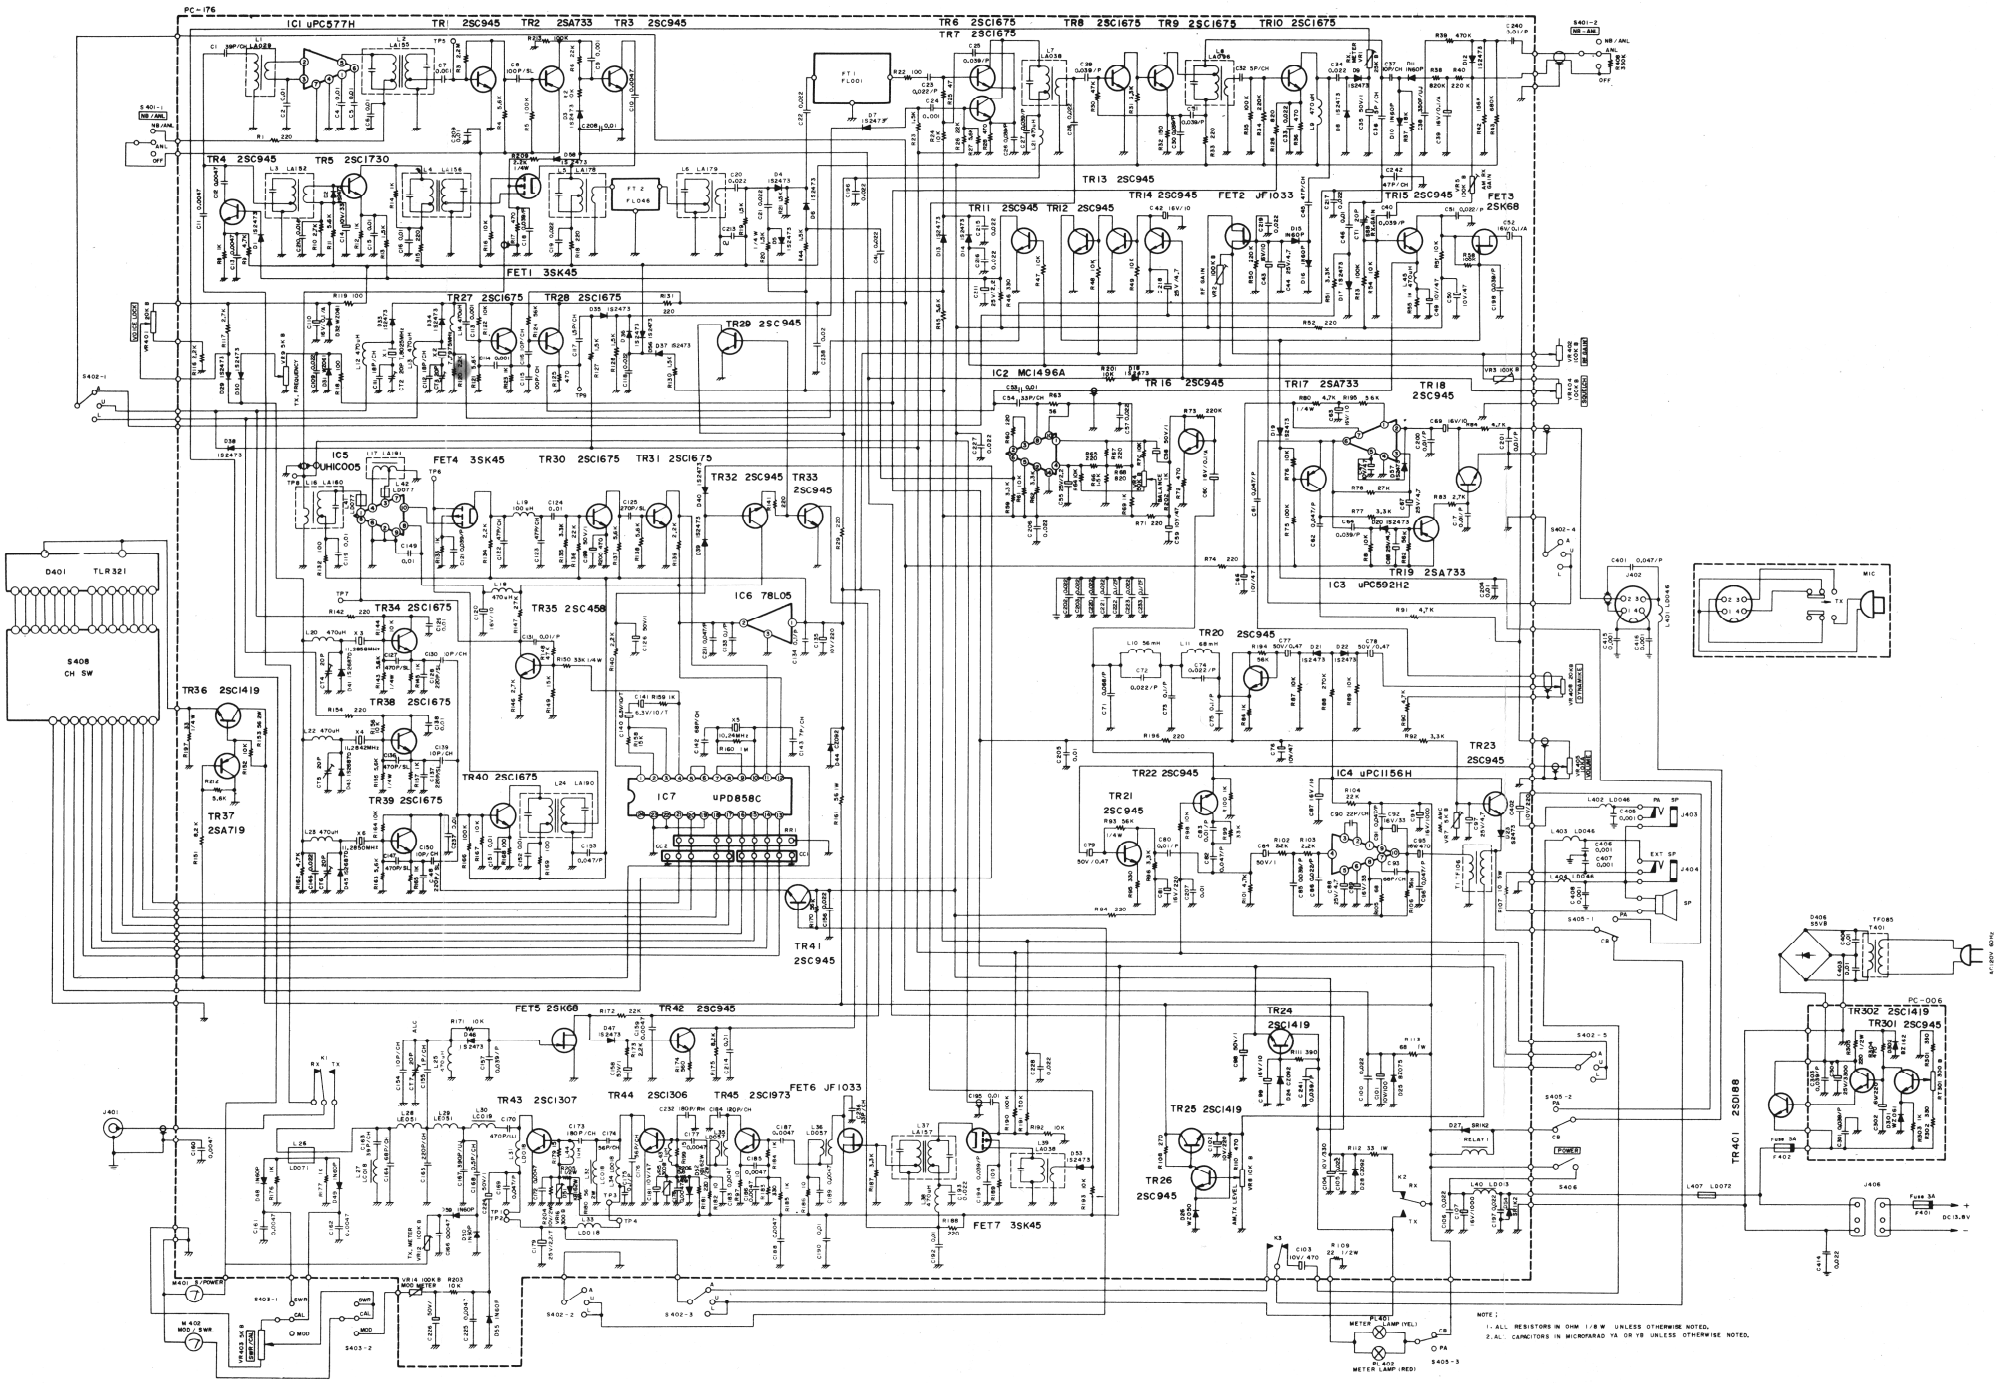CIRCUIT DIAGRAM FOR COBRA 139XLR